



www.barkbusters.net




FITTING INSTRUCTIONS for...

- HONDA XL600V Transalp
- HONDA XL650V Transalp
- HONDA XL700V Transalp

Preparation

Remove original handlebar end weight with internal weight parts if installed.

Left side roll back hand grip about 20mm and depress the retaining clips through the two holes in the handlebar with a screwdriver. There is one top and one bottom. On right side remove throttle twist grip. Leave handlebar weight connected to the internal weight to help with removing the internal parts. Pull on weight while pressing clips through hole.

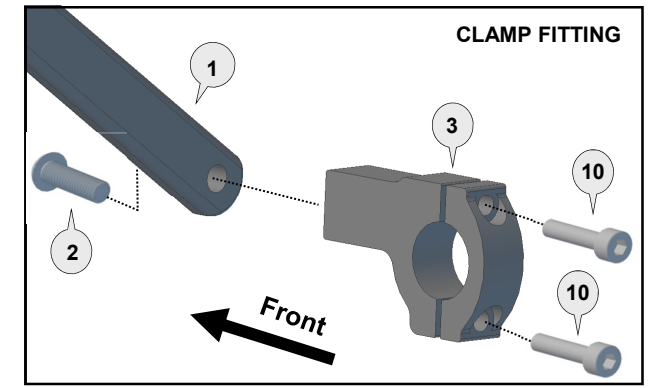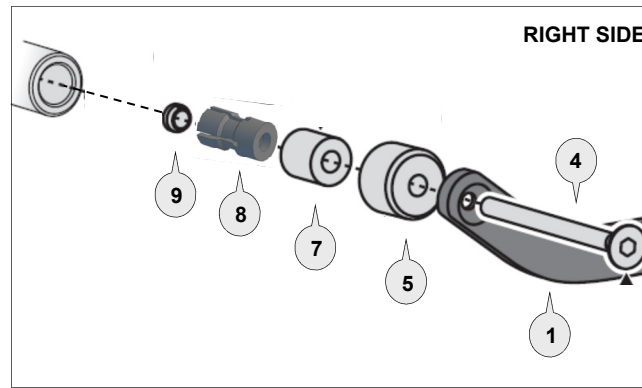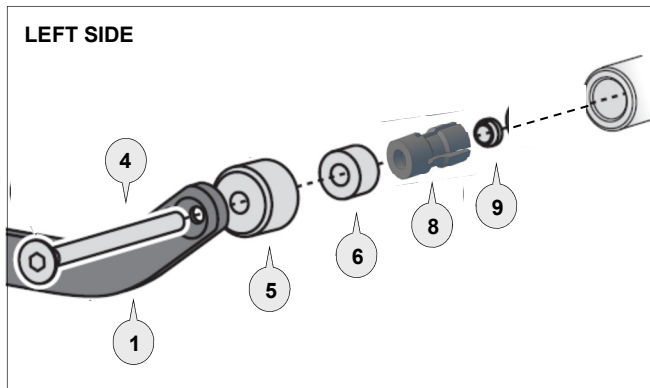

Fitting Procedure


Loosely assemble the clamp to the handlebar as per diagram. Attach the handguard backbone with applicable parts to the handlebar end. Attach inner end of backbone to the clamp. Position backbone so it is horizontal when viewed from the side and tighten all bolts in the following order (4), (10) then (2).

Important: Use the specified torque setting over page.





Personalise Your Protection

Guard options sold separately

JET	JET-003
VPS	VPS-003
Storm	STM-003
CARBON	BCF-003

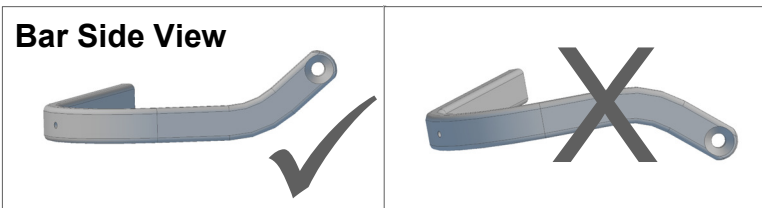

Phone: +61 (0)2 4271 8244
Email: info@barkbusters.net

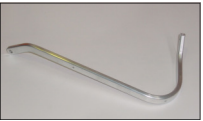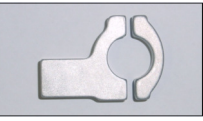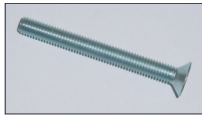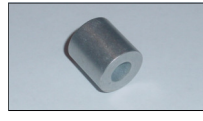1 Aluminium Bar  PN: BAR-V-051 Pcs. 1 Left & 1 Right	2 Button Head Bolt 25mm  PN: M8x25BHCSZP Pcs. 2	3 Clamp  PN: CLAMP-22 Pcs. 1 pair	4 Flat Head Bolt 75mm  PN: M8x75FHCSZP Pcs. 2	5 Bar End Weight  PN: BEW35 Pcs. 2	6 Spacer 17mm  PN: SP17-20-8 Pcs. 1	7 Spacer 20mm  PN: BSSRT20 Pcs. 1	8 Expander  PN: BBE17 Pcs. 2
9 Taper Nut  PN: NUT12 Pcs. 2	10 Socket Head Bolt 20mm  PN: M6x20SHCSZP Pcs. 4						

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the below table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

It is important there is a working clearance (approx 3mm) between the throttle grip end and the handguard to ensure a free closing throttle. Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	28 Nm (20.7 lbf ft)



Phone: +61 (0)2 4271 8244
 Email: info@barkbusters.net
 Web: www.barkbusters.net



Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.