




www.barkbusters.net

FITTING INSTRUCTIONS for...

- MV AGUSTA Enduro Veloce (2025 - On)
- MV AGUSTA LXP Orioli (2025 - On)



Preparation: Remove original handguards and bar end weight, if fitted.

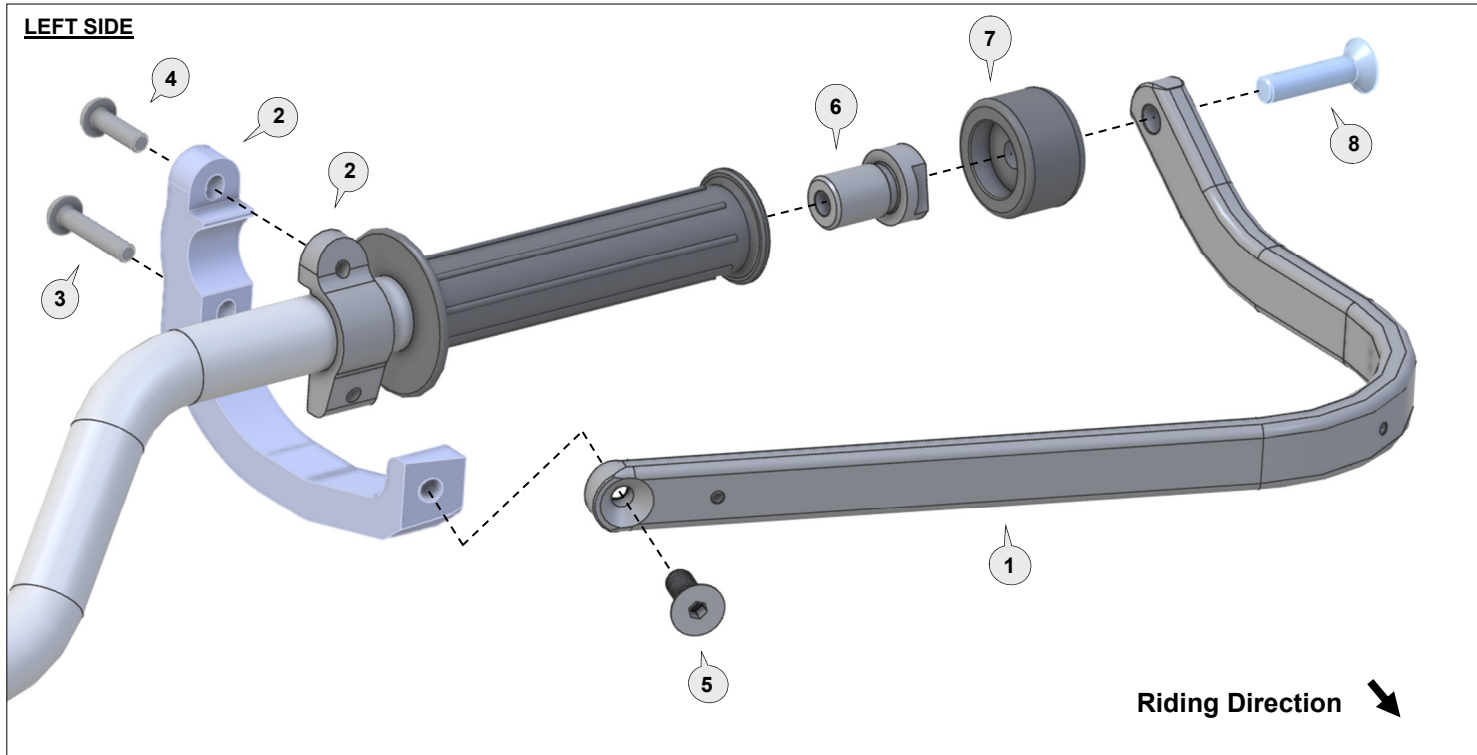

Installation:

- Loosely assemble the clamp (2) to the handlebar as per diagram.
- Screw the threaded insert (6) in the handlebar end and tight it to the specified torque (over page).
- Attach the handguard backbone (1) with applicable parts to the handlebar end.
- Align the clamp (2) with the backbone end hole and insert screw (5).
- Position backbone so it is horizontal when viewed from the side.
- Tighten all bolts to the specified torque (over page) in the following order: (8), (5), (3) and (4) simultaneously to keep an even gap with the clamp saddle.
- If additional grip clearance is required, washer (9) can be used between insert (6) and weight (7).

 Bar Side View

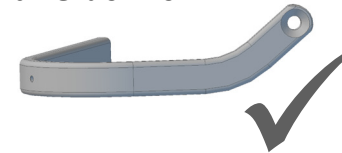

1 Aluminium Bar  PN: BAR-V036 Pcs. 1 Left & 1 Right	2 Clamp Frame & Saddle  PN: CFS-ADV-25 Pcs. 1 set	3 Button Head Bolt 30mm  PN: M6X30BHCSZP Pcs. 2	4 Button Head Bolt 20mm  PN: M6X20BHCSZP Pcs. 2	5 Flat Head Bolt 25mm  PN: M8X25FHCSZP Pcs. 2	6 Threaded Insert  PN: BESF2 Pcs. 2	7 Bar End Weight  PN: BEW35 Pcs. 2
---	---	---	--	---	---	--

8 Flat Head Bolt 40mm  PN: M8x40FHCSZP Pcs. 2	9 M8 Flat Washer  PN: M8FW-SS Pcs. 2
---	--

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	28 Nm (20.7 lbf ft)
M12	32 Nm (23.6 lbf ft)

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

It is important there is a working clearance (approx 3mm) between the throttle grip end and the handguard to ensure a free closing throttle. Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight. Please note that all Rideworx test fitment are done on stock motorcycles with factory standard handle bar, windscreen, etc. in there original positions.

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.

Personalise Your Protection
Guard options sold separately

JET	JET-003
VPS	VPS-003
Storm	STM-003
CARBON	BCF-003



Email: info@barkbusters.net

[@BARKBUSTERSHANDGUARDS](https://www.instagram.com/barkbustershandguards)

