



www.barkbusters.net

FITTING INSTRUCTIONS for...

Single Point Bar End Mount (hollow handlebar)

NOTE:


- #12 - use when extra grip clearance is required
- #11 - use with larger internal diameter bars up to 18.5mm ID as required

Optional Parts - Sold Separately

For 1 inch hollow handlebars
with Internal Diameter up to
22mm

Order Code: **B-074**

RIGHT SIDE

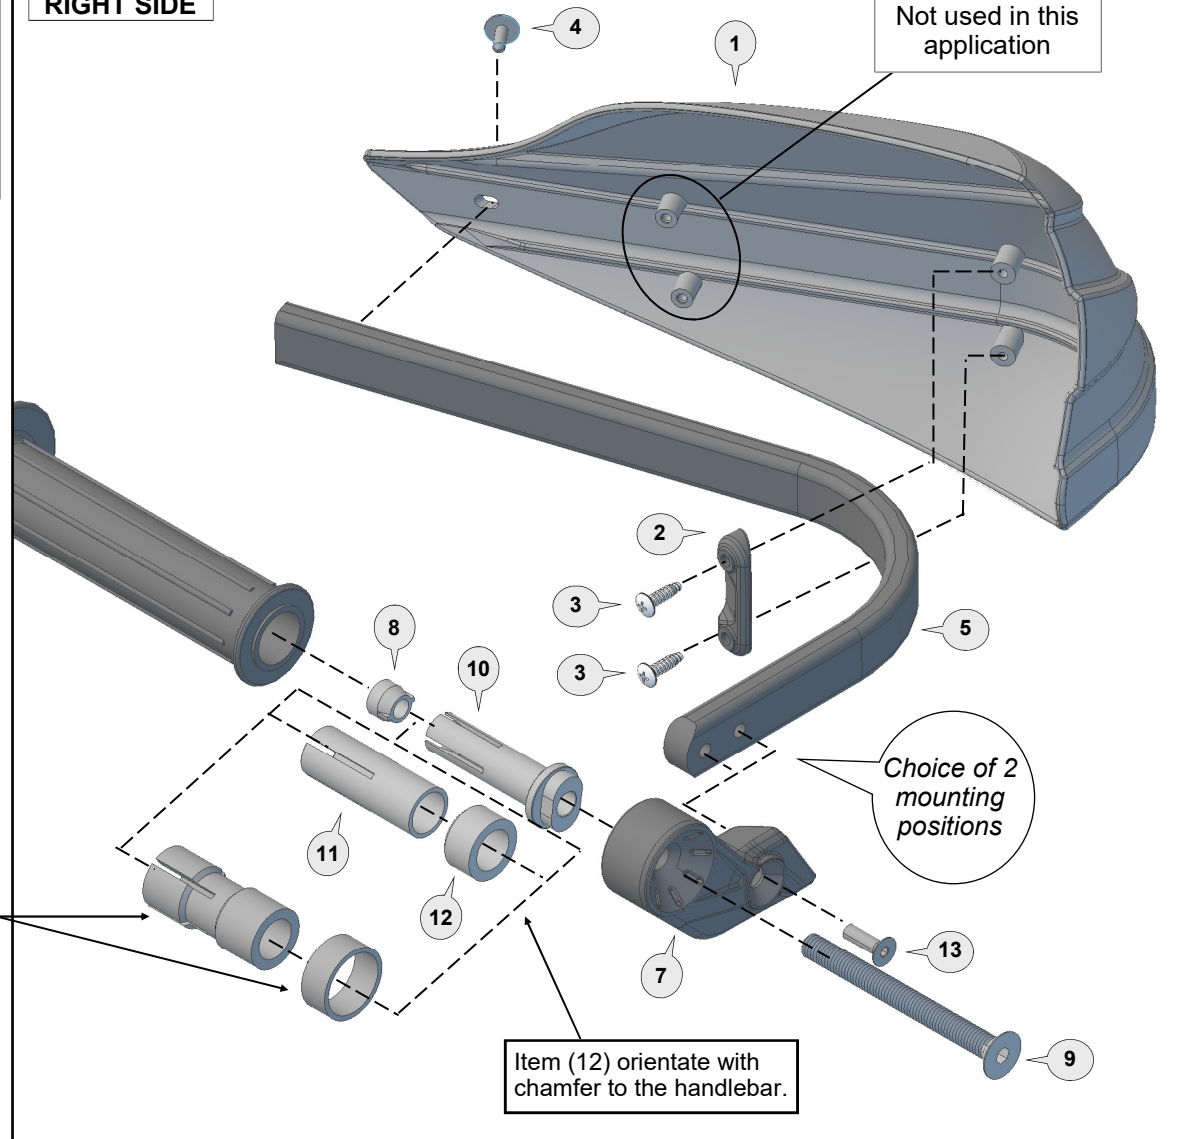



NOTE:

Many HONDA models have a rubber mounted, internal threaded bar weight.

For correct fitment of handguard, BOTH original external and internal bar weights must be removed, to leave a hollow handlebar.




Phone: +61 (0)2 4271 8244
Email: info@barkbusters.net

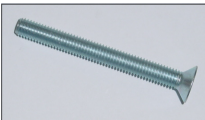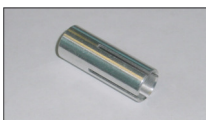1 Storm Plastic  PN: SP1 Pcs. 1 Left & 1 Right	2 Saddle  PN: STORM-SADDLE Pcs. 2	3 Mush Head Screw  PN: SCREWPT3.5x14 Pcs. 4	4 Black Screw  PN: STSZ811MX11 Pcs. 2	5 Aluminium Bar (Black)  PN: BAR-S-011 Pcs. 2	6 Bar End LEFT  PN: BE-ST-L Pcs. 1	7 Bar End RIGHT  PN: BE-ST-R Pcs. 1	8 Taper Nut  PN: NUT12 Pcs. 2
9 Flat Head Bolt 75mm  PN: M8x75FHCSZP-FT Pcs. 2	10 Inner Collet  PN: ICL Pcs. 2	11 Collet  PN: : COLLET14-17 Pcs. 2	12 Spacer  PN: SP12-21-14 Pcs. 2	13 Flat Head Bolt 16mm  PN: : M6x16FHCSZP-DL Pcs. 2	NOTE: Product STM-005-01-NP does not include Items 1, 2, 3 & 4. Order code: STM-003		

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	28 Nm (20.7 lbf ft)

NOTE:
 Thread lock on bolts is for **single use ONLY**.
 If reinstalling, apply new thread lock.

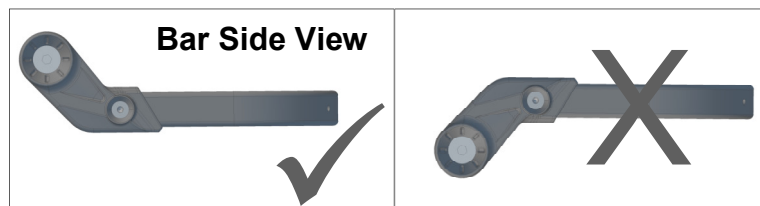

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.

INS-STM-005-02

Personalise Your Protection
 Guard options sold separately

JET	JET-003
VPS	VPS-003
Storm	STM-003
CARBON	BCF-003



RIDEWORX

Phone: +61 (0)2 4271 8244
 Email: info@barkbusters.net
 Web: www.barkbusters.net

