




www.barkbusters.net

FITTING INSTRUCTIONS for...

- ZERO FX/FXE

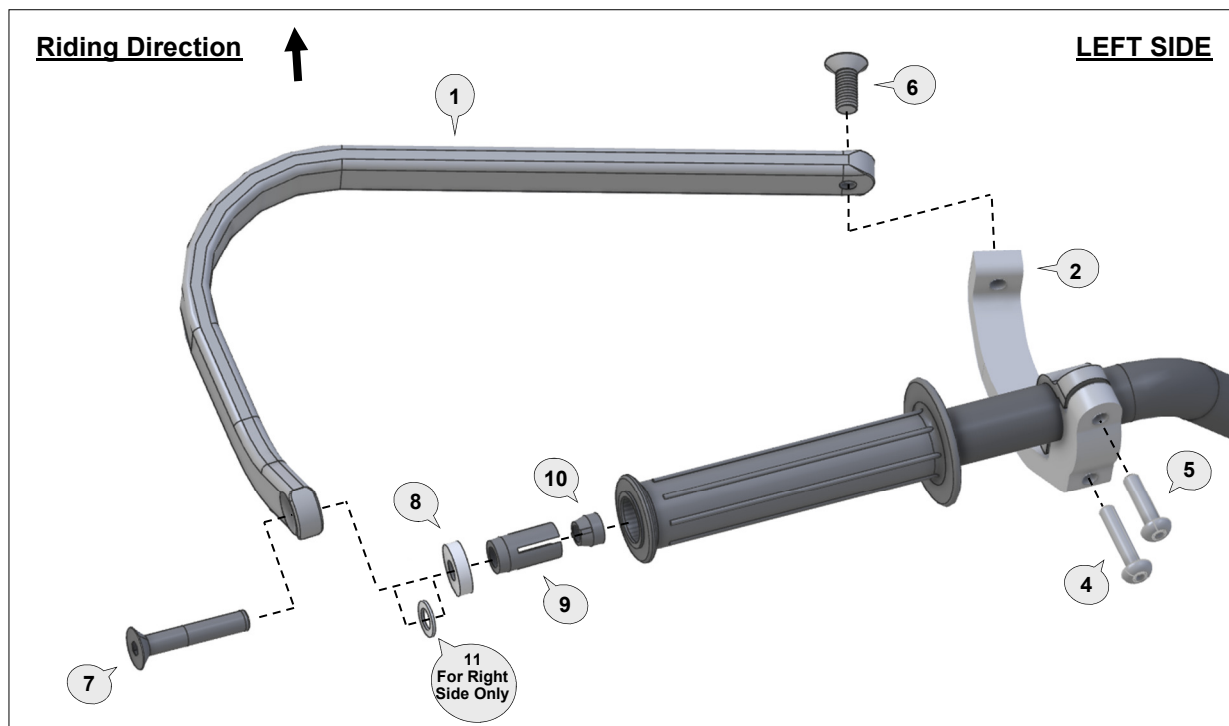

Preparation

Remove the original handguards (if fitted) and original bar end weights. The Master cylinder needs to move inwards to allow the lever to clear the backbone.

Fitting Procedure shown for the RIGHT side



(repeat for Right side with applicable parts. Use spacer (11) on Right side)

1. Loosely assemble clamp (2) to handlebar as per diagram.
2. Pre-assemble parts (7), (1), (8), (9) and (10) and then present the assembly to the end of the handlebar, making sure the clamp (3) aligns with the end of the backbone (1).
3. Loosely tight screw (7) and (6). While making sure the assembly is in the right position,

Note: The preferred backbone position is horizontal when viewed from the side.

Tighten all bolts in the following order (7), (6), then (4 and 5). Use recommended torque specifications over page.

Bar Side View




Personalise Your Protection

Guard options sold separately

JET	JET-003
VPS	VPS-003
Storm	STM-003
CARBON	BCF-003



Email: info@barkbusters.net
[@BARKBUSTERSHANDGUARDS](https://www.instagram.com/BARKBUSTERSHANDGUARDS)

1 Aluminium Bar  PN: BAR-V020 Pcs. 2 (L & R)	2 Clamp Frame & Saddle (left)  PN: CFS-ADV-L Pcs. 1	3 Clamp Frame & Saddle (right)  PN: CFS-ADV-R Pcs. 1	4 Button Head Bolt 30mm  PN: M6x30BHCSZP Pcs. 2	5 Button Head Bolt 20mm  PN: M6x20BHCSZP Pcs. 2	6 Flat Head Bolt 20mm  PN: M8x20FHCSZP Pcs. 2	7 Flat Head Screw 45mm  PN: M8x45FHCSZP Pcs. 2	8 Collar  PN: BBEC5M Pcs. 2
9 Expander  PN: BBE14A Pcs. 2	10 Taper Nut  PN: NUT12 Pcs. 2	11 M8 Flat Washer  PN: M8FW-SS Pcs. 1					

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	28 Nm (20.7 lbf ft)

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly or if rear view mirror vision is obscured. Check periodically that all bolts are tight.



RIDEWORX

Phone: +61 (0)2 4271 8244
 Email: info@barkbusters.net
 Web: www.barkbusters.net



Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.