

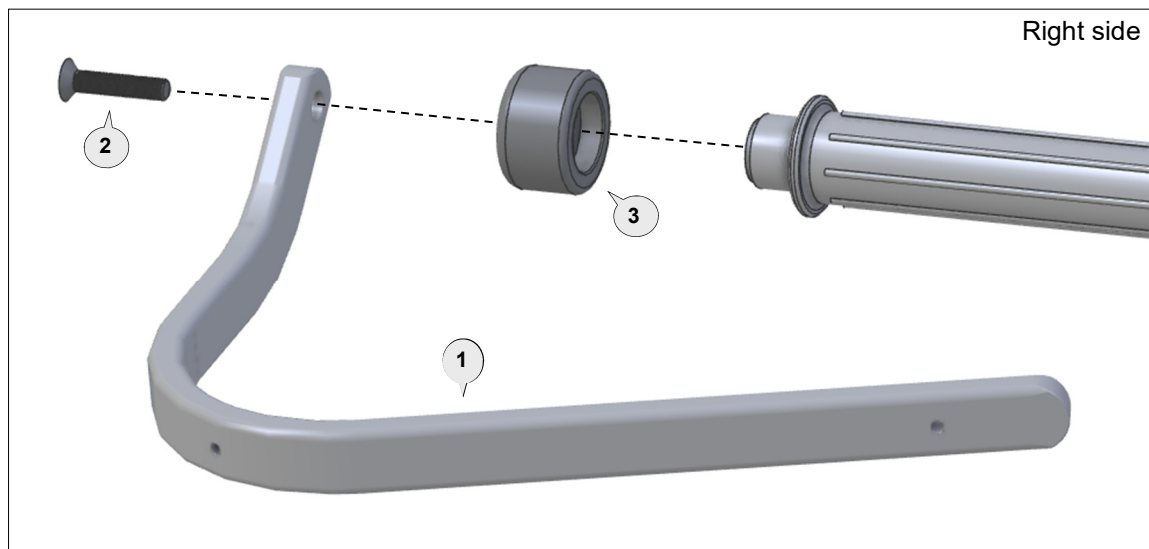


Preparation

Remove the original handguards (if fitted) and original bar end weights.

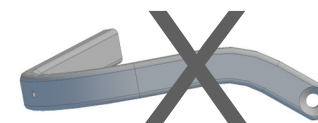

Bar Side View

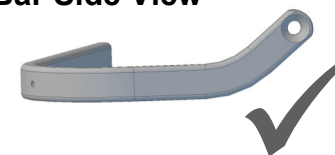

Fitting Procedure (repeat for the left side with the required parts)

Thread the bolt (2) into the end of the backbone (1), the bar end weight (3) and screw into the handlebar end.

Tighten bolt (2) to 10N.m

Note: Preferred backbone position is horizontal when viewed from side. The bolt already has thread lock applied to its end.

Personalise Your Protection


Guard options sold separately

JET JET-003

VPS VPS-003

Storm STM-003

CARBON BCF-003

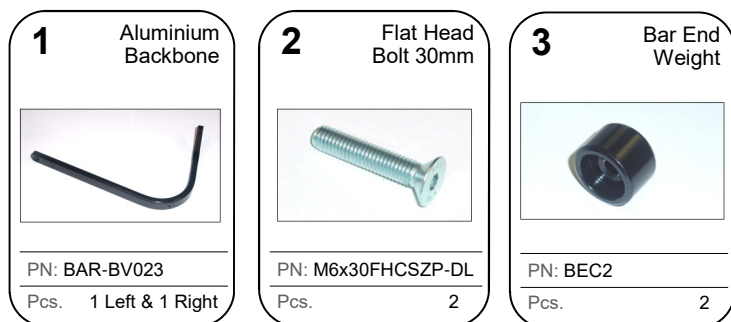

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the below table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

It is important there is a working clearance (approx 3mm) between the throttle grip end and the handguard to ensure a free closing throttle. Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.



Phone: +61 (0)2 4271 8244
 Email: info@barkbusters.net
 Web: www.barkbusters.net



Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.