



www.barkbusters.net

FITTING INSTRUCTIONS for...


- CF Moto 700MT (2025 - on)

Fitting note

Ensure handlebar is position is in standard position, with long line even with triple clamp

Preparation

Remove original handguards and bar end weights if fitted.

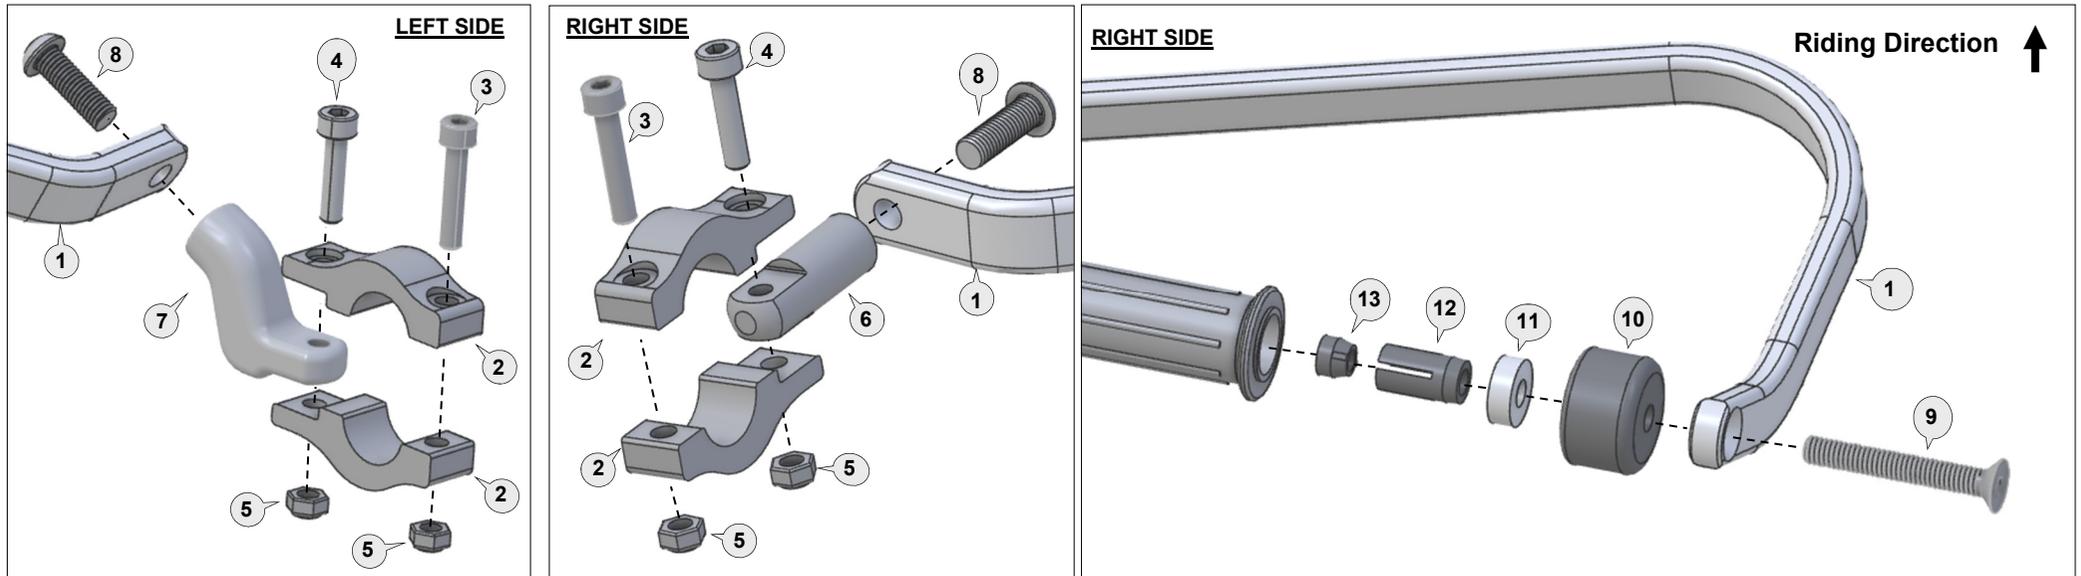


Installation


For Right Side: Repeat assembly instruction for left side

- Loosely assemble the clamp (2) and clamp connector (6) to the handlebar as per diagram.
- Attach the handguard backbone (1) with applicable parts to the handlebar then attached to clamp connector (6)
- Position backbone so it is horizontal when viewed from the side.
- Tighten all bolts to the specified torque (over page) in the following order: (9), (8), (4) then (3).

Bar Side View

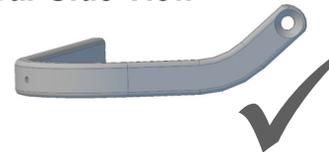

Phone: +61 (0)2 4271 8244
Email: info@barkbusters.net
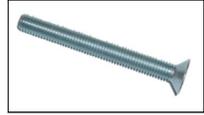
<p>1 Aluminium Bar</p>  <p>PN: BAR-V-069 Pcs. Left/Right Pair</p>	<p>2 Clamp Saddles</p>  <p>PN: CS-STD Pcs. 2 pairs</p>	<p>3 Socket Head Bolt 30mm</p>  <p>PN: M6X30SHCSZP Pcs. 2</p>	<p>4 Socket Head Bolt 25mm</p>  <p>PN: M6X25SHCSZP Pcs. 2</p>	<p>5 Nylock Nut 6mm</p>  <p>PN: M6LN Pcs. 4</p>	<p>6 Clamp Connector</p>  <p>PN: CP4 Pcs. 1</p>	<p>7 Clamp Connector</p>  <p>PN: CP5 Pcs. 1</p>	<p>8 Button Head Bolt 25mm</p>  <p>PN: M8X25BHCSZP Pcs. 2</p>
<p>9 Flat Head Bolt 60mm</p>  <p>PN: M8X60FHCSZP Pcs. 2</p>	<p>10 Bar End Weight</p>  <p>PN: BEW35 Pcs. 2</p>	<p>11 Spacer (7mm)</p>  <p>PN: SP07-20-8 Pcs. 2</p>	<p>12 Bar End Expander</p>  <p>PN: BBE14A Pcs. 2</p>	<p>13 Nut 12mm - Two wings</p>  <p>PN: NUT12 Pcs. 2</p>			

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	20 Nm (14.8 lbf ft)

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

It is important there is a working clearance (approx 3mm) between the throttle grip end and the handguard to ensure a free closing throttle. Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight. Please note that all Rideworx test fitment are done on stock motorcycles with factory standard handle bar, windscreen, etc. in there original positions.

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.

Personalise Your Protection
Guard options sold separately

JET JET-003
VPS VPS-003
Storm STM-003
CARBON BCF-003



Email: info@barkbusters.net

[@BARKBUSTERSHANDGUARDS](https://www.instagram.com/barkbustershandguards)

