

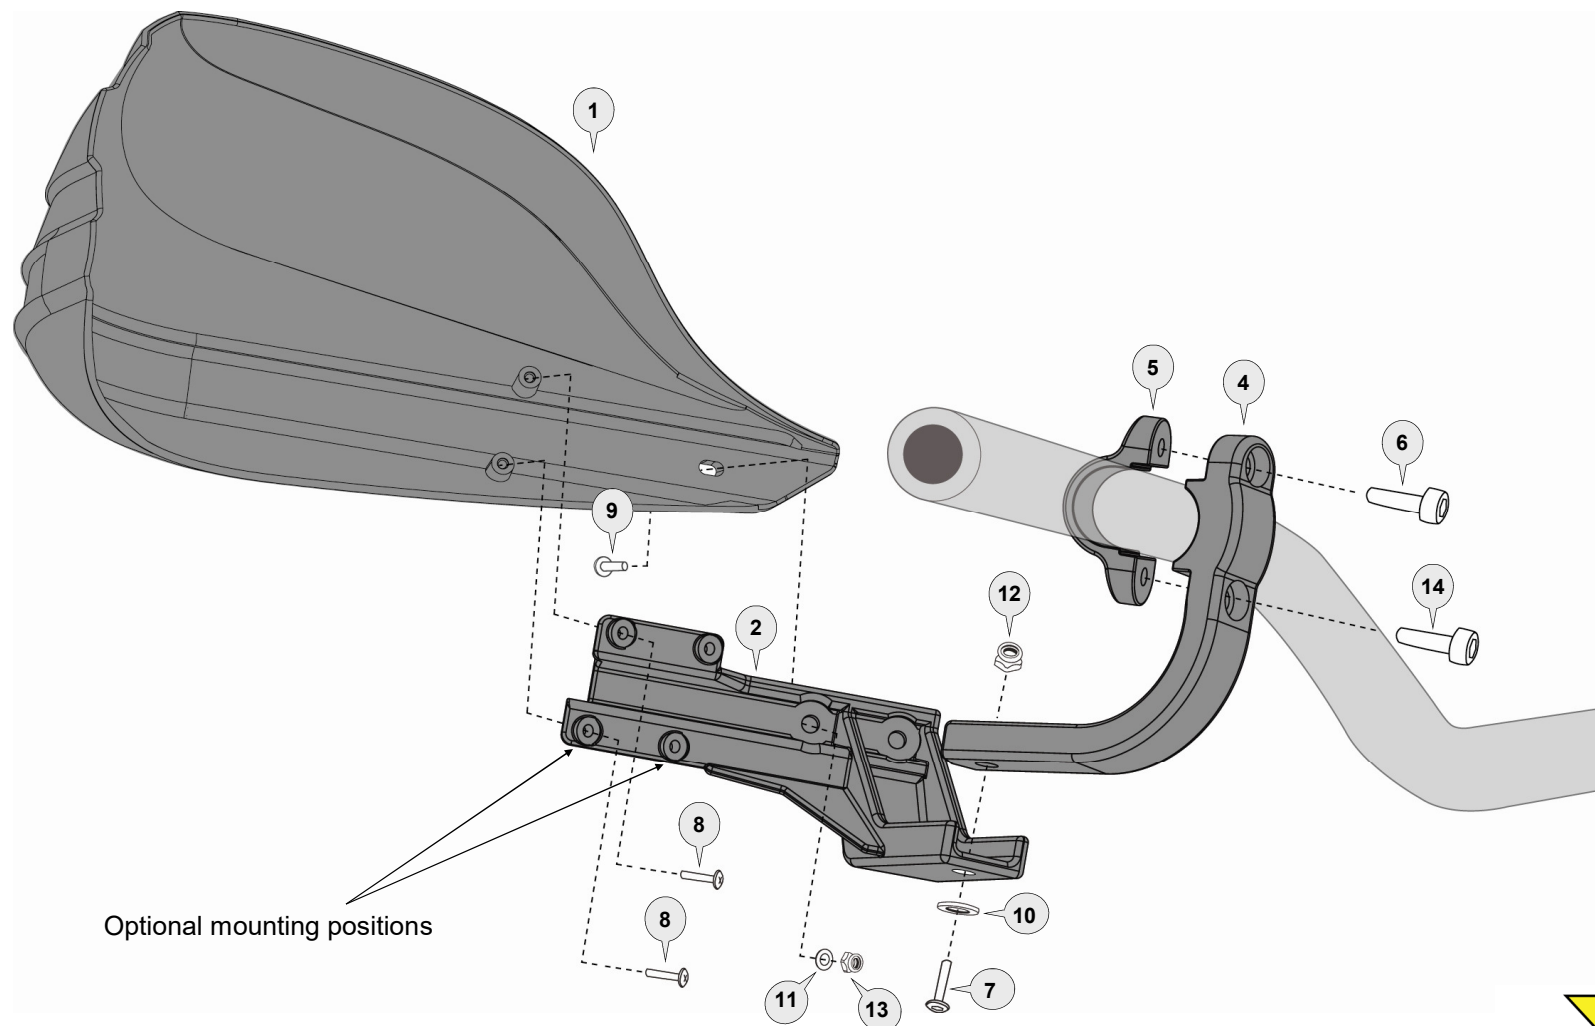
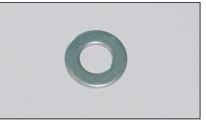


LEFT SIDE

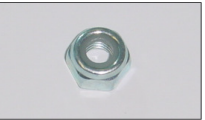

Optional mounting positions

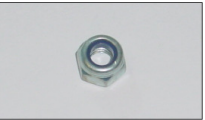

1 Storm Plastic  PN: SP1 Pcs. 1 Left & 1 Right	2 L-Bracket Left  PN: LB-L Pcs. 1	3 L-Bracket Right  PN: LB-R Pcs. 1	4 Clamp Frame  PN: CF25 Pcs. 2	5 Clamp Saddle  PN: SADDLE25 Pcs. 2	6 Socket Head Bolt 16mm  PN: M6x16SHCSZP Pcs. 2	7 Button Head Bolt 20mm  PN: M6x20BHCSZP Pcs. 2	8 Mush Head Screw  PN: SCREWPT3.5X14 Pcs. 4
9 Mush Head Bolt  PN: M5x15SPMH Pcs. 2	10 Flat Washer 6mm  PN: M6FW Pcs. 2	11 Flat Washer 5mm  PN: M5FW Pcs. 2	12 Nylock Nut 6mm  PN: M6LN Pcs. 2	13 Nylock Nut 5mm  PN: M5LN-5 Pcs. 2	14 Socket Head Bolt 25mm  PN: M6x25SHCSZP Pcs. 2	NOTE: Product STM-002-01-NP does not include #1. #1 sold separately. Order code: STM-003 Personalise Your Protection Guard options sold separately Storm STM-003 CARBON BCF-003	

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	28 Nm (20.7 lbf ft)

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.

INS-STM-002-01



RIDEWORX

Phone: +61 (0)2 4271 8244
 Email: info@barkbusters.net
 Web: www.barkbusters.net

